

# PRECEDENT

---




## 2667-S3 Connor Long Sofa

W100 D40 H34

Seat H17 / Arm H24 / Inside Seat W83 D24


Optional Metal Leg shown / Standard with two toss pillows

Also available 2667-S2 Connor Mid Length Sofa / W91 D40 H34

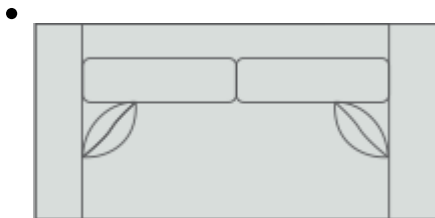

**2667-S1 Connor Sofa**

W82 D40 H34

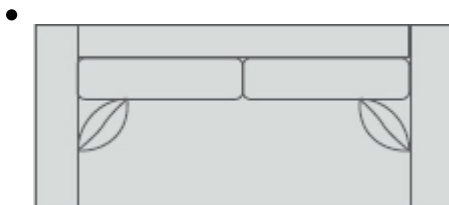

**2667-S2 Connor Mid Length Sofa**


W91 D40 H34

-




**2667-S3 Connor Long Sofa**

W100 D40 H34

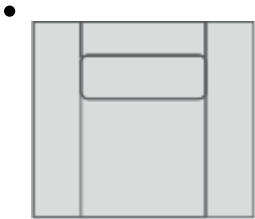

**2667-C1 Connor Chair**

W45 D40 H34

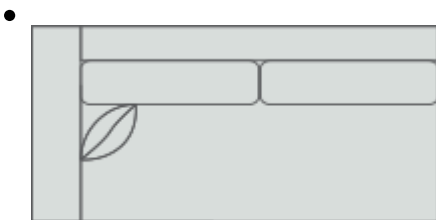


**2667-SL Connor Left Arm Sofa**

W92 D40 H34




**2667-SR Connor Right Arm Sofa**

W92 D40 H34

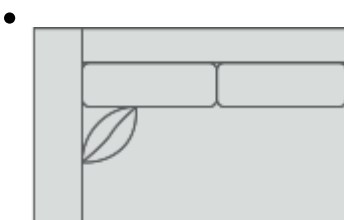


**2667-LL Connor Left Arm Loveseat**

W64 D40 H34

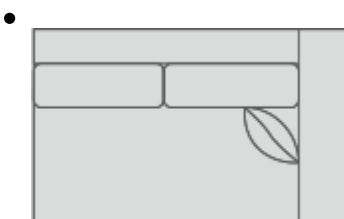


**2667-LR Connor Right Arm Loveseat**

W64 D40 H34

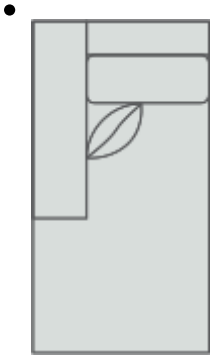


**2667-CL Connor Left Arm Chaise**

W36 D67.5 H34

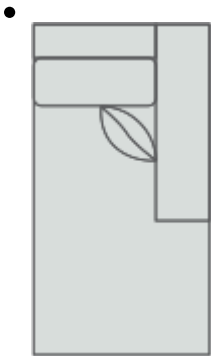


**2667-CR Connor Right Arm Chaise**

W36 D67.5 H34

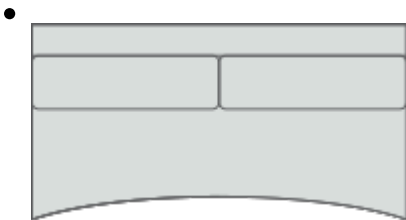

**2667-SO Connor Shaped Armless Sofa**


W76.5 D40 H34

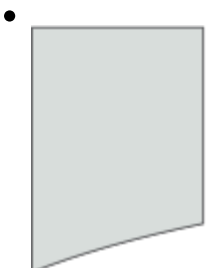


**2667-LO4 Connor Left Shaped Ottoman**

W35 D50 H17



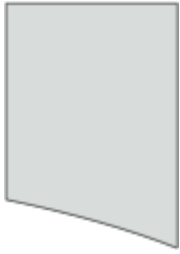

**2667-RO4 Connor Right Shaped Ottoman**  
W35 D50 H17

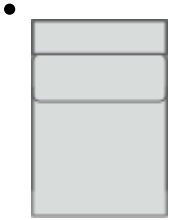

**2667-A1 Connor Armless Chair**  
W28 D40 H34



**2667-LO Connor Armless Loveseat**  
W66 D40 H34




**2667-BO Connor Armless Loveseat**  
W56 D40 H34




**2667-BL Connor Left Bumper Ottoman**  
W56 D40 H17




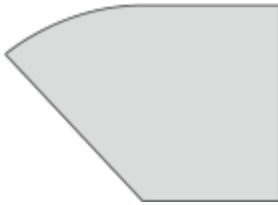

**2667-BR Connor Right Bumper Ottoman**  
W56 D40 H17

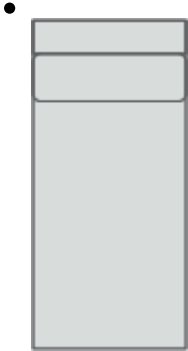

**2667-CA Connor Armless Chaise**  
W32 D67.5 H34

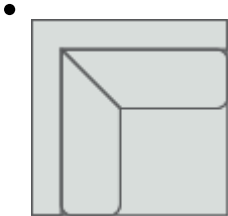

**2667-E1 Connor Corner Chair**  
W40 D40 H34



**2667-O3 Connor Ottoman**  
W50 D40 H17




**2667-O1 Connor Ottoman**  
W40 D28 H17







**2667-JL Connor Left Arm Sofa**  
W83 D40 H34

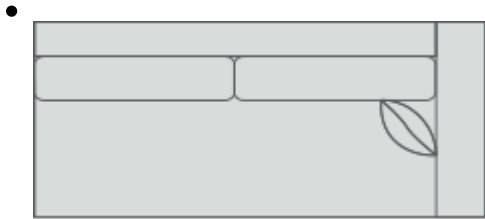

**2667-JR Connor Right Arm Sofa**  
W83 D40 H34

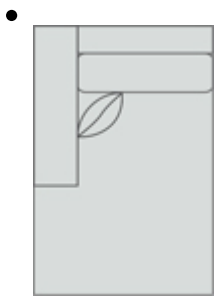

**2667-KL Connor Left Arm Chaise**  
W45 D67.5 H34

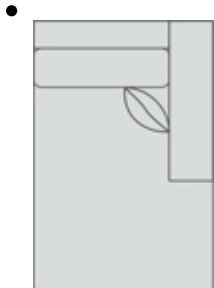

**2667-KR Connor Right Arm Chaise**  
W45 D67.5 H34